

PROINERT® AGENT STORAGE CYLINDERS FOR IG-100

DESCRIPTION

Fike ProInert Cylinders are offered in an 80 Liter size and filled to a pressure of 200 or 300 bar. The cylinders may be utilized in single or multiple cylinder applications as needed and linked together through a common discharge manifold. The cylinder can be mounted in the upright or horizontal mounting position. Upon installation, the cylinders shall be secured using either cylinder straps or a suitable racking arrangement. Cylinders are shipped from the factory with a protective shipping cap. These caps should be stored in a suitable area for future use. Shipping caps must be in place while transporting or handling cylinders. A pressure gauge and actuator are included in the cylinder assembly, but are shipped separately.

Refer to Fike ProInert Recharge/Refill Manual, P/N 06-312, for cylinder refill instructions and procedures.

Each ProInert Valve Assembly includes a combined pressure gauge and switch device providing visual pressure indication and continuous cylinder pressure monitoring at the fire control panel.

The Agent Storage Cylinder is a steel pressure vessel designed to hold the IG-100 agent under pressure until it is discharged.



Data Sheet

CYLINDER DATA / SPECIFICATIONS

Cylinder Size:	80 Liter (water capacity)
Cylinder Dimensions (approximate):	Height: 1910 mm (75 in)
	Width: 267 mm (10.5 in)
Mounting Position:	Upright
Cylinder Part Number	IG71-080-200-100
	IG71-080-300-100
Cylinder – Pressurization Level:	200 bar at 15°C
	300 bar at 15°C
Temperature Limitation: (ISO 14520, EN 15004 & EN 12094)	-20°C (minimum)
	50°C (maximum)
Agent Capacity:	15.34 m ³ (17.88 kg) @ 200 bar
	21.18 m ³ (24.68 kg) @ 300 bar
Cylinder Rating:	EN 1964-2
Cylinder Actuation Methods:	Electric/Pneumatic – Input from Actuator Package/Control Panel
	Manual/Pneumatic – Input from Push Knob on Actuator Package
Cylinder Color:	Signal Red
Tare Weight:	136 kg (approximate)
Gross Weight:	154 kg (approximate) @ 200 bar
	161 kg (approximate) @ 300 bar

APPROVAL




Certification
Number 654a

ITEMS SUPPLIED WITH CYLINDER

Item Number	Description	Data Sheet
1	Shipping Cap	n/a
2	Prolnert Valve Assembly	C.2.28.01
3	Pressure Gauge & Switch (shipped separately)	C.2.59.01
4	Nameplate (see note 1)	n/a
5	Pneumatic Actuator Assembly (shipped separately)	C.2.47.01

NOTES:

- 1) Fike nameplate provides the information that is specific to each cylinder:
 - Assembly number of the cylinder, weight information: tare, gross and agent and installation, operation and safety information.
 - All cylinders filled either by the factory or by an Approved Initial Fill Station are provided with a nameplate bearing the approval agency markings.
- 2) All cylinders do not have siphon tubes and can be mounted the upright or horizontal position.

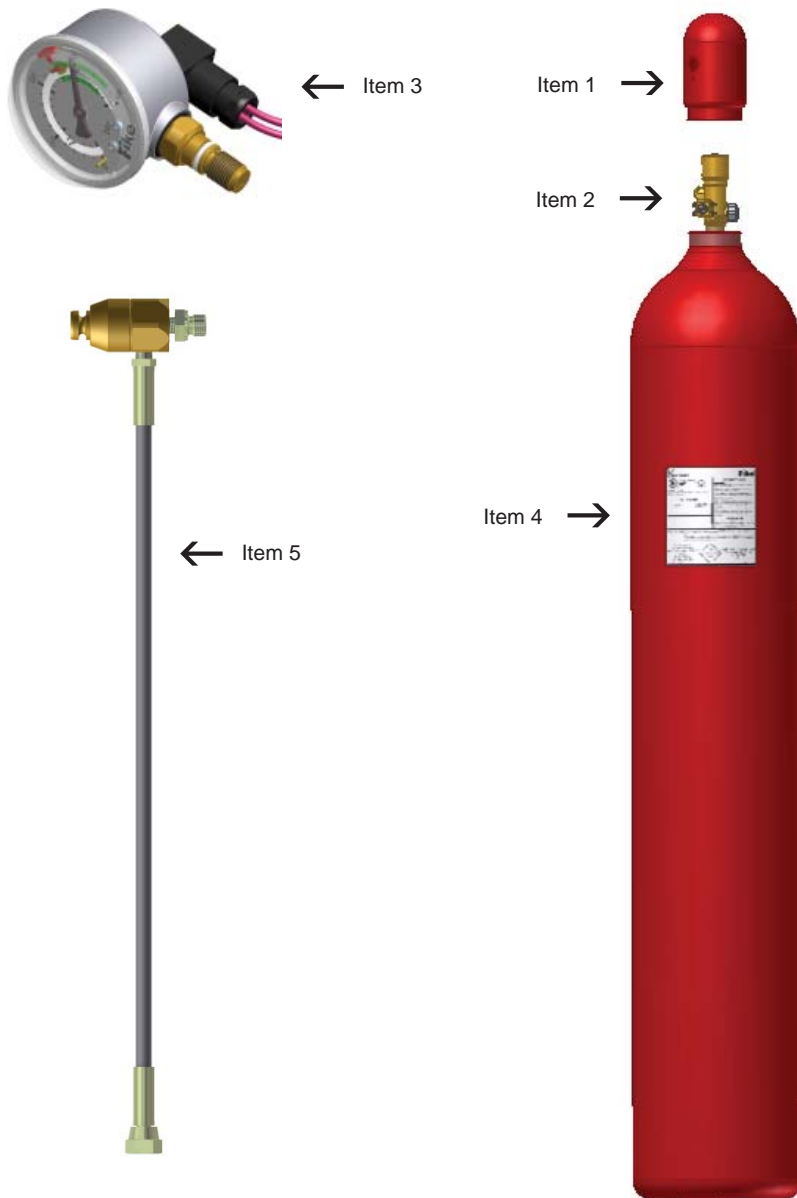

INSTALLATION

The system installation must comply with the requirements of this manual; ISO 14520 or EN 15004 or NFPA 2001 and all applicable local codes, regulations, and standards; and the authority having jurisdiction (AHJ).

WARNING: “DO NOT” start system installation until the final design of the total system has been verified using Fike’s Engineered Flow Calculation.

WARNING: The Actuator should always be the last component installed on a Fike Clean Agent Fire Suppression system.

SAFETY: The system involves handling high pressure equipment. All installers must be fully trained by Fike and conversant with this manual.

Attention is drawn to the European Pressure Equipment Directive 97/23/EC. All pipe-work must be made using certified materials.

Do not locate any system components where they would be subject to physical damage, exposure to corrosive chemicals, or harsh weather conditions or fire.

AGENT STORAGE CYLINDERS

Make certain that each cylinder has been installed in the correct location. Each cylinder has a nameplate with an identifying part number. Check the cylinder part number against those listed on the system plans to verify their locations.

Cylinders should be located in clean, dry, and relatively vibration-free areas. Avoid aisles and other high traffic areas where physical damage or tampering is more likely. Cylinders should never be mounted where the cylinder could potentially be splashed with, or submerged in any liquid.

Cylinder brackets must be mounted securely to solid load-bearing surfaces that will support the cylinder load. Some installations may require additional mounting support not supplied by Fike.

Cylinders should be located to allow easy accessibility to the actuation package for manual release of the system. Manual release is achieved by removing the locking pin and pressing the red manual activation strike knob adjacent to the electric solenoid. This will pneumatically initiate the discharge sequence.

WARNING: The Solenoid Actuator should always be the last component installed on any Fike ProInert system.

Procedure:

1. Confirm the cylinder location and mount the cylinder back rack and manifold support.
2. Position the cylinders in the racking. Do NOT remove the valve protection cap until the cylinders are fully mounted. The orientation of the valve outlet is indicated by a label on the cylinder neck. Generally discharge outlets will be to the right and at an angle of 30° to the wall.
3. Secure the cylinders and mount the manifold.
4. Fit the discharge hose assemblies to the manifold.
5. Install and test the discharge pipe-work.
6. Remove the valve protection caps and valve outlet caps (retain for future use.)
7. Remove and retain the Pressure Gauge blanking plug.
8. Fully screw in the gauge and then unscrew it by a maximum of 1 turn to the correct orientation.
9. Remove and retain the plug from the valve actuation port.
10. Connect the Solenoid Actuator and pilot hoses to each cylinder valve actuator. Do NOT fit actuators to the cylinder valves until the system is fully commissioned.



Copyright © Fike Corporation All Rights Reserved.
Form No. C.2.56.01 December, 2011 Specifications are subject to change without notice.